


FILL FLASH

The flash will fire when the shutter is released regardless of lighting. Use fill flash to illuminate a backlit subject or to reduce harsh shadows on your subject's face.

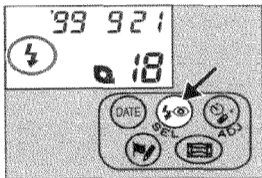



Press the flash-mode button until  appears in the data panel.

- When you turn the camera off, the flash mode will be reset to Autoflash or Autoflash with red-eye reduction, whichever mode was used last.

FLASH CANCEL

The flash will not fire in this mode. Use flash cancel when you want to photograph subjects that are beyond the flash range or to capture the ambiance of existing light.

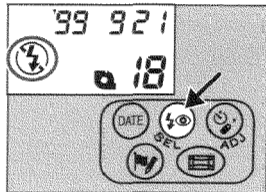



Press the flash-mode button until  appears in the data panel.

- Shutter speeds may be slow in this mode. Use of a tripod is recommended.
- When you turn the camera off, the flash mode will be reset to Autoflash or Autoflash with red-eye reduction, whichever mode was used last.

NIGHT PORTRAIT

In this mode, the camera balances the flash and existing light exposure so you can take beautiful pictures of people at sunset or at night. The flash is set to fill flash with red-eye reduction.

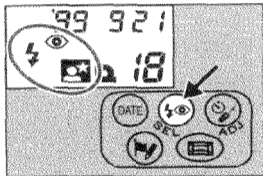



Press the flash-mode button until  appears in the data panel.

- The shutter speed may be slow. Use of a tripod is recommended.
- When you turn the camera off, the flash mode will be reset to Autoflash or Autoflash with red-eye reduction, whichever mode was used last.

LANDSCAPE/NIGHT VIEW

The flash will not fire in this mode and the focus is set to infinity. It can be used to photograph night scenes, ensure sharp focus for landscapes and other distant subjects, and should be used when photographing through glass.

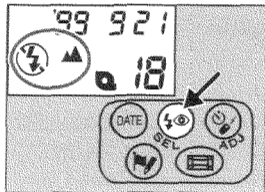

Press the flash-mode button until  appears in the data panel.


- The shutter speed may be slow. Use of a tripod is recommended.
- When you turn the camera off, the flash mode will be reset to Autoflash or Autoflash with red-eye reduction, whichever mode was used last.

ADDITIONAL FEATURES

DATE IMPRINTING

Your camera records date and time information on the film's magnetic strip that certified photofinishers can imprint in the front and back of your photographs (Date/Time Imprinting).

- Some labs can not imprint date and/or time information on the front of your photographs. See your photofinisher for a full description of available services.

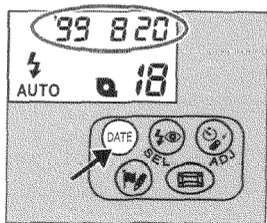


**Before taking the picture:
Press the date button until the data
panel displays the format you want to
see on the print.**

The sequence is as follows:



- When ----- is displayed in the data panel, no data will be printed on the front of the print, but the date and time of exposure will be imprinted on the back of the print.
- If the date/time display is blinking, date/time information will not be imprinted. The date/time information needs to be reset (p.46).

DATE IMPRINTING - Setting the Date and Time

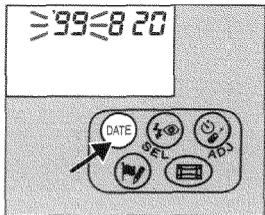


- This camera has a quartz clock and automatic calendar through the year 2029.


- 1. Open the lens cover to turn the camera on.**
- 2. Press and hold the date button for two seconds.**

- The date display will appear in the data panel and the year will blink.


- 3. Press the adjust button to adjust the blinking item [1], then press the select button to make the next item blink [2].**

- Press and hold the adjust button to change the value rapidly.

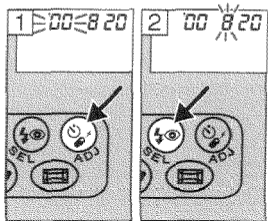

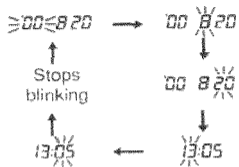

- Each press of the select button causes the next item to blink.

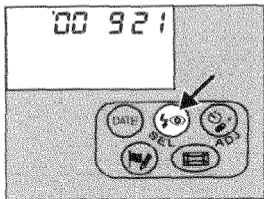


4. Press the select button until all items stop blinking to set the updated information.

- The data panel shows the date display briefly, then the camera exits the set date/time mode.

DATE IMPRINTING - Changing the Format

 1. Open the lens cover to turn the camera on.



2. Press and hold the date button for two seconds.

- The date display will appear in the data panel, and the year will blink.



3. Press and hold the select button for two seconds.

- All items in the date display blink.



4. Press the adjust button to change the display format.

- The format sequences as follows:

'00 921 → 921'00 → 21 9'00

21 9'00




5. Press the select button to set the updated information.


- The data panel shows the updated format for five seconds, then the camera exits the change format mode.
- Pressing the select button during the five seconds will make the year blink for setting the date and time (p.46).
- The format will remain after replacing the battery.

TITLE IMPRINTING

Three titles from the title list can be preset for use while taking pictures. Any one of the three preselected titles can be selected before the picture is taken (User Select Title Imprinting). When selected, the title will be recorded on the film's magnetic data strip. At certified Advanced Photo System labs, the selected title will be printed on the back of the print. See your photofinisher for details. Some labs may not be able to print the titles in all of the available languages.

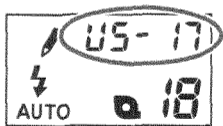


Titles are displayed in the data panel as a title code. Please refer to the Title List sheet for the titles available with this camera.

When  appears in the data panel, the title will be recorded on the print.

TITLE IMPRINTING - Preselecting Titles

Three title codes have been set into memory. You can change one or all three title codes at any time.


1. **Open the lens cover to turn the camera on.**
2. **Select the code for the title you want from the title list.**

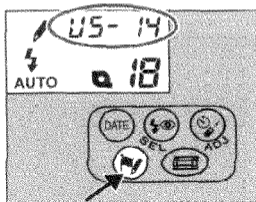

3. **Press the title button to display the title code you want to change.**


Continued on following page.

TITLE IMPRINTING - Preselecting Titles

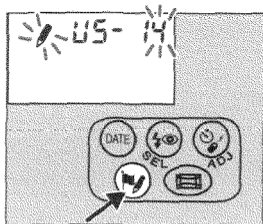


4. Press and hold the title button for two seconds.

- The last digit of the title code number will blink.

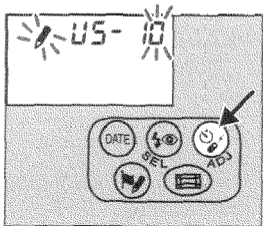


5. Press the adjust button to change its value.

- Press and hold the adjust button to change the value rapidly.

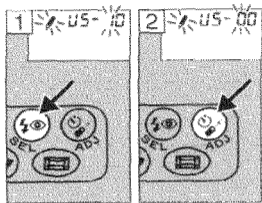


6. Press the select button to make the next digit blink **1**, change its value using the adjust button **2**.

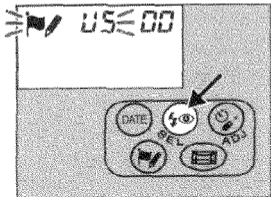


7. Press the select button to make the language code blink.

Continued on following page.

TITLE IMPRINTING - Preselecting Titles

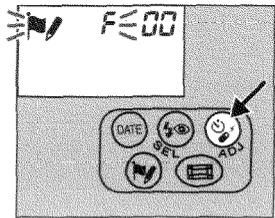



8. Press the adjust button to change the language code.

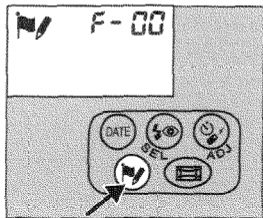

9. When the title information is correct, press the title button.

- The updated title will be recorded on the print if you press the shutter-release button.
- The data panel shows the updated title briefly, then the camera exits the title mode.

 TITLE IMPRINTING - Frame Title

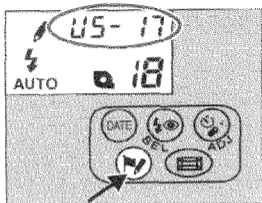

Before taking the picture:

1. Press the title button to display the code for the title you want.

- Each press of the title button changes the title code to the next selection.

US-17 → US-02 → F-00
Date/time display

- Pressing any other button replaces the title code with date/time display.


2. Take the picture. The magnetic data is written and the selection is cancelled for the next frame.

TITLE IMPRINTING - Filmstrip Title

An additional title for the entire roll of film can be selected. Both the filmstrip title and the frame title will be printed on the back of the print.




After the film has been rewound and **Q** blinks in the data panel:

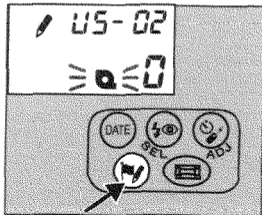


1. Press the title button to display the desired filmstrip title.

 - Each press of the title button changes the title code to the next selection.




2. Press the shutter-release button all-the-way down to set the title.

- The camera advances to write the data on the film's leader, then rewinds the film.


3. When  blinks in the data panel again, press the film-chamber release and remove the film.


- Set the filmstrip title before removing the film.

 Once a filmstrip title is set, it can not be changed or cancelled using the camera.

SELF-TIMER

The self-timer delays release of the shutter for approximately 10 seconds after you press the shutter-release button.

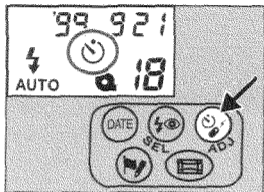


1. Place the camera on a tripod, then press the self-timer button until  appears in the data panel.



2. Center your subject in the focus frame.

- Use Focus Hold for off-center subjects (p.29).


3. Press the shutter-release button all-the-way down.


-  will blink in the data panel during countdown.
- The self-timer lamp will blink slowly. Just before the shutter is released, the self-timer lamp will blink rapidly, then glow.
- To cancel the self-timer, press the self-timer button or close the lens cover to turn the camera off.
- The self-timer is automatically cancelled after the shutter releases.
- Do not press the shutter-release button while standing in front of the camera.

REMOTE CONTROL (Sold Separately)

The IR Remote Control RC-3 (not included) allows remote camera operation from up to 5.5m (18 ft.) away.


- The distance may be shorter or the remote control may not operate with backlit subjects, under fluorescent light, or in extremely bright lighting conditions.
- To save power, the data panel will shut off and the lens will retract if the remote control is not operated for more than eight minutes.
- Remote control mode will remain selected after the picture is taken.

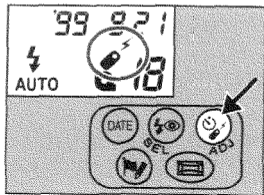

1. Place the camera on a tripod, then press the remote-control button until  appears in the data panel.



2. Compose your picture.

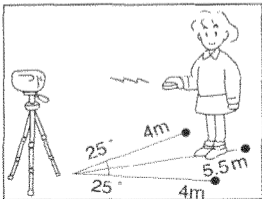


3. Point the remote toward the front of the camera and press \bullet or 2s.

- Release (\bullet): the remote-control lamp will blink once before the picture is taken.
Delay (2s): the remote-control lamp will blink several times before the picture is taken.


Continued on following page.

FOCUS HOLD IN REMOTE CONTROL MODE

1. Set the camera to remote control mode.

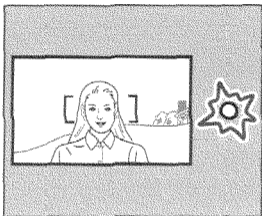

2. Center your subject in the focus frame, then press the shutter-release button partway down so the green ready lamp glows.

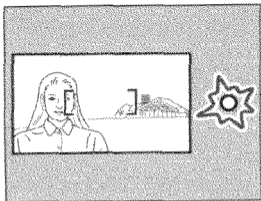

3. Lift your finger from the shutter-release button, then recompose the picture.


4. Point the remote toward the front of the camera and press **• or **2s**.**

- The focus will remain locked until the focus is reset, remote-control mode is cancelled, or the camera is turned off.


Continued on following page.

CHANGING THE BATTERY

The remote control uses a 3V lithium battery (CR2032). When pressing the remote-control buttons does not release the shutter, the battery must be replaced. (The supplied battery should be sufficient for approximately ten years of operation).

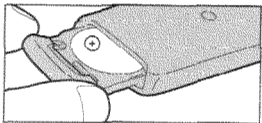

1. Pull out the battery chamber and remove the old battery.

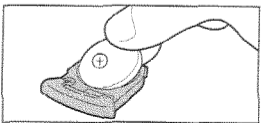

2. Insert a new battery into the battery chamber with its plus side up.

3. Slide the battery chamber back into the remote control.

APPENDIX



To receive the best possible prints, take your film to a photolab displaying the Certified Advanced Photo System logo. Photofinishers displaying this logo have been certified according to Advanced Photo System guidelines.

Certified photolabs will be able to provide the following five services.

1. CHP - Print Format

Your film will be printed according to the format set when the picture was taken.

2. Date and Title Imprinting

The date, time, and selected title are printed on the back of the picture in the chosen format.

3. PQI - Print Quality Improvement

The lab will compensate (or not compensate) printing according to the data recorded on the magnetic data strips.

4. Film is returned in the cassette.

To keep the film dust free and aid in organization, film is returned in its original film cassette. The VEI will be set to to prevent accidental loading.

5. Index Print



An index print showing a numbered image of each frame is included with your returned order.

Reprints

Images are always captured in the H format (High-Vision). You can select any of the three formats when ordering reprints.

CLEANING

- Keep the AF and Meter windows clean or the focus and/or exposure may not be accurate.
- If the camera body is dirty, gently wipe it clean with a soft, clean, dry cloth.
- To clean the lens surface, first brush away any dust or sand then, if necessary, moisten a lens tissue with lens cleaning fluid and gently wipe the lens in a circular motion, starting from the center.
- Never place lens fluid directly on the lens.
- Never touch the lens surface with your fingers.
- Never use alcohol or solvents to clean the camera.

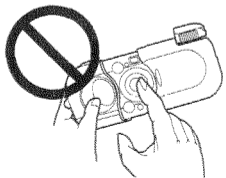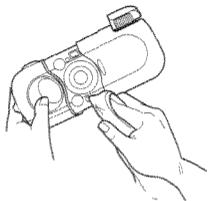

STORAGE

When storing the camera for extended periods, please follow these guidelines:

- Store the camera in a cool, dry, well-ventilated area away from dust and chemicals. For very long periods, place the camera in an airtight container with a silica gel drying agent.
- Before using after prolonged storage, always check the camera's operation to make sure it is functioning properly.

Continued on following page.

QUESTIONS AND SERVICE

- If you have questions about your camera, contact your local camera dealer or write to the Minolta distributor in your area.
- If the camera is damaged or the rewind motor does not operate, do not open the film chamber or forcefully remove the cassette. Contact an authorized Minolta Service Facility.
- Before shipping your camera for repair, please contact an authorized Minolta Service Facility for details.

BEFORE IMPORTANT EVENTS

- Check camera operation carefully or take test photographs.
- Minolta is not responsible for any loss which may occur due to an equipment malfunction.

FILM CASSETTE WARNING

The film used in Advanced Photo System cameras stores some data magnetically. Do not place the cassette on or near anything that creates a magnetic field, such as a television or stereo speakers.

CAMERA ERROR

If all the indicators in the data panel blink or the data panel is blank and the camera will not function with a fresh battery, remove and reinsert the battery. If normal operation does not resume or the camera malfunctions repeatedly, contact an authorized Minolta Service Facility.

Continued on following page.

OPERATING TEMPERATURE AND CONDITIONS

- This camera is designed for use from -10 to 40 °C (14 to 104 °F).
- Never leave your camera where it may be subjected to extreme temperatures such as in the glove compartment of a car.
- At colder temperatures, the data panel response time will be slow. At higher temperatures, the display will temporarily darken, but will restore when the temperature normalizes.



- Never subject the camera to extreme humidity.
- To prevent condensation from forming, place the camera in a sealed plastic bag when bringing it from the cold environment into a warm environment. Allow it to come to room temperature before removing it from the bag.
- When photographing in cold weather, it is recommend that you keep the camera and spare batteries *inside your coat* to keep them warm when you are not shooting. Cold batteries will regain some of their charge when they warm up.
- This camera is *not water proof, dust-proof, or sand-proof*; take care when using it at the beach or near water. Costly or irreparable damage may occur.

TECHNICAL DETAILS

Camera Type:	IX240 Lens Shutter Camera
Lens:	22.5-45mm f/5.4 - 6.6 lens (approx. equivalent to 28-56mm in 35mm format); 4 element/4 group construction
Focusing Range:	C/H: Wide 0.4m - ∞ (1.3 ft. - ∞) Tele 0.4m - ∞ (1.3 ft. - ∞) P: Wide 0.48m - ∞ (1.6 ft. - ∞) Tele 1.0m - ∞ (3.3 ft. - ∞)
Film Speed Setting:	Automatic setting for DX-coded films ISO 25-3200
Metering Range:	EV 4.0 - 17 (ISO 200)
Flash Range (ISO 200):	Wide: 0.4 - 3.6m (1.3 - 11.8 ft.) Tele: 0.4 - 2.9m (1.3 - 9.5 ft.) (without red-eye reduction)

- Shutter Speed Range:** 8 - 1/500 sec.
- Battery:** One CR-2 3V Lithium battery
Battery-condition indication: 3-stage indication
Battery performance: approx. 11 rolls based on Minolta's standard test method using 25 exposure rolls with the flash for 50% of the exposures.
- Viewfinder:** Magnification: 0.32X - 0.57X
Field of View (H format): 85% (for subject at 3m)
- Dimensions:** 102 x 55 x 28.5 mm
(4.0 x 2.2 x 1.1 in.)
- Weight:** 145g (5.11 oz.) without battery

Specifications are based on the latest information available at the time of printing and are subject to change without notice.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.



This mark on the bottom of your camera is there to inform you that this camera meets the requirements of the EU (European Union) concerning interference causing equipment regulations. CE stands for Conformité Européenne (European Conformity).

Minolta Co., Ltd.

3-13, 2-Chome, Azuchi-Machi, Chuo-Ku, Osaka 541-8556, Japan

Minolta GmbH

Kurt-Fischer-Strasse 50, D-22923 Ahrensburg, Germany

Minolta France S.A.

365 Route de Saint-Germain, F-78420 Carrières-Sur-Seine, France

Minolta (UK) Limited

7 Tanners Drive, Blakelands, Milton Keynes. MK14 5BU, England

Minolta Austria Ges. m.b.H.

Amalienstrasse 59-61, A-1131 Wien, Austria

Minolta Camera Benelux B.V.

Zonnebaan 39, P.O. Box 6000, NL-3600 HA Maarssen, The Netherlands

Belgium Branch

Kontichsesteenweg 38, B-2630 Aartselaar, Belgium

Minolta (Schweiz) AG

Riedstrasse 6, CH-8953 Dietikon, Switzerland

Minolta Svenska AB

Albygatan 114, S-171 54 Solna, Sweden

Finland Branch

Niittykatu 6 Pt 37, SF-02201 Espoo, Finland

Minolta Portugal Limitada

Av. do Brasil 33-A, P-1700 Lisboa, Portugal

Minolta Corporation

Head Office

101 Williams Drive, Ramsey, New Jersey 07446, U.S.A.

Los Angeles Branch

11150 Hope Street Cypress, CA 90630, U.S.A.

Minolta Canada Inc.

Head Office

369 Britannia Road East, Mississauga, Ontario L4Z 2H5, Canada

Vancouver Branch

230-3771 Jacombs Road, Richmond, B.C. V6V 2L9, Canada

Minolta Hong Kong Limited

Room 208, 2/F, Eastern Center, 1065 King's Road, Quarry Bay, Hong Kong

Minolta Singapore (Pte) Ltd.

10, Teban Gardens Crescent, Singapore 608923

Shanghai Minolta Optical

Products Co., Ltd.

368 Minolta Road, Songjiang, Shanghai, China